





DMX Live control and Stand Alone controller

- USB & ETHERNET connection
- 3 DMX512 universes in live mode (computer)
- 2 DMX512 universes in stand alone
- micro sdcard memory for stand alone use
- 8 dry contact trigger ports via HE10 connector
- clock & calendar triggering function
- stand alone mode with 5 areas and 250 scenes

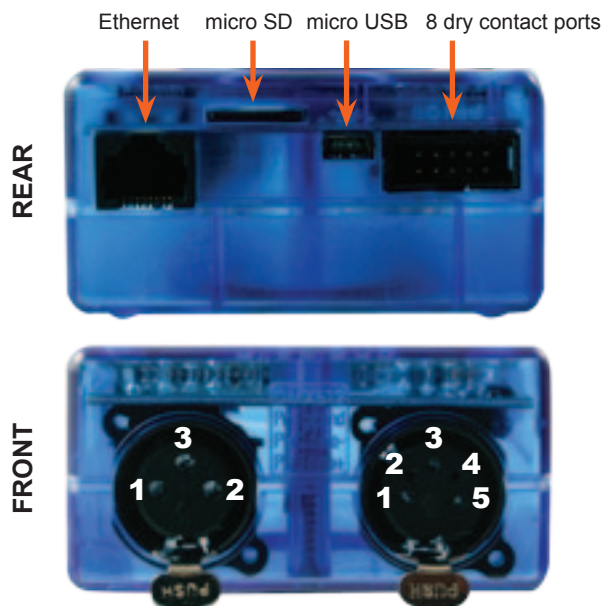

Universe #1
1 DMX1 ground
2 DMX1 data-
3 DMX1 data+


Universe #2 #3
1 DMX2 ground
2 DMX2 data-
3 DMX2 data+
4 DMX3 data-
5 DMX3 data+

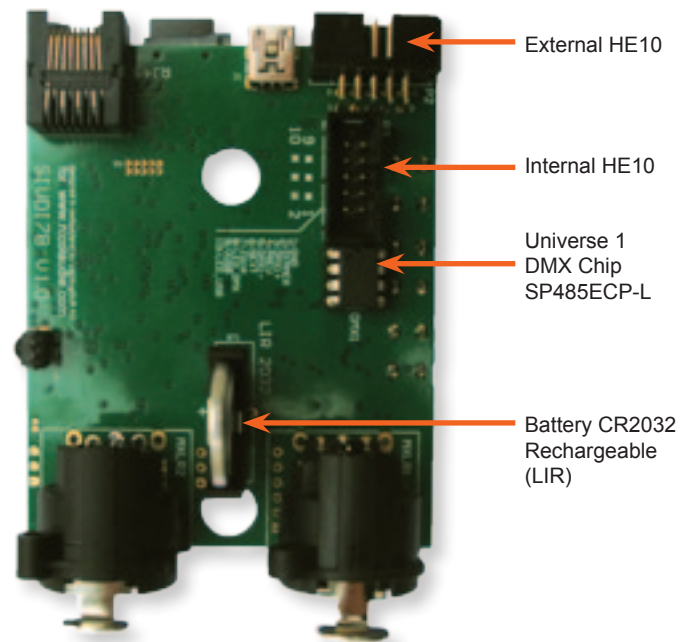

SPECIFICATIONS


Package	Interface, cdrom, usb cable
OS Requirement	Mac OSx 10.6/10.7/10.8 - Windows XP/VISTA/SEVEN/8 32/64 bits and USB 2.0
Colors	Blue, Orange, Gray, Green, Marine, White, Red
Connections	XLR3, XLR5, USB MINI, ETHERNET, 2 HE10, BATTERY
Power	Power From 5V to 5.5V DC (AC/DC adapter in option, ref: POWER1_EU)
Certifications	EC, EMC, ROHS, ETL, UL (some are in progress)
Interface	79x92x43 mm 120g
Package	140x135x50 mm 340g
Use	Environnement IP20 Temperature 0°C to 50°C
Buttons	2 buttons to change scene (PREVIOUS/NEXT) + 1 button to change AREA

 External HE10



P1 PORT 1 **P6** PORT 6
P2 PORT 2 **P7** PORT 7
P3 PORT 3 **P8** PORT 8
P4 PORT 4 **GND** Ground
P5 PORT 5

 
Internal HE10



1 Ground 6 NEXT
2 Dimmer 7 Zone
3 DMX1+ 8 LED DMX
4 PREVIOUS 9 VUSB
5 DMX1- 10 LED USB




LIVE USE WITH COMPUTER

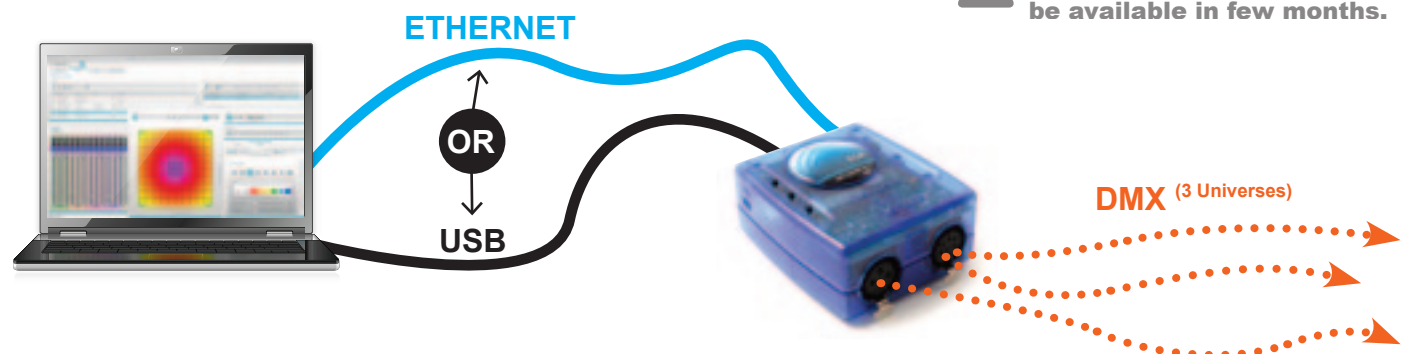


! Some network and synchronization features will be available in few months.

STAND ALONE USE

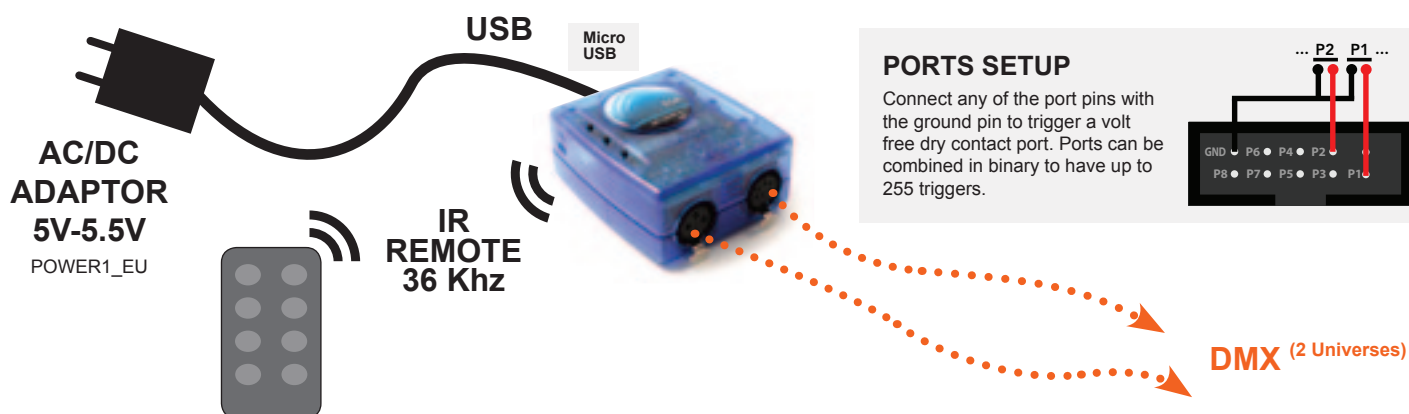


PORTS SETUP

Connect any of the port pins with the ground pin to trigger a volt free dry contact port. Ports can be combined in binary to have up to 255 triggers.

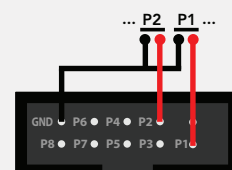

SOFTWARE TOOLS.EXE to set parameters

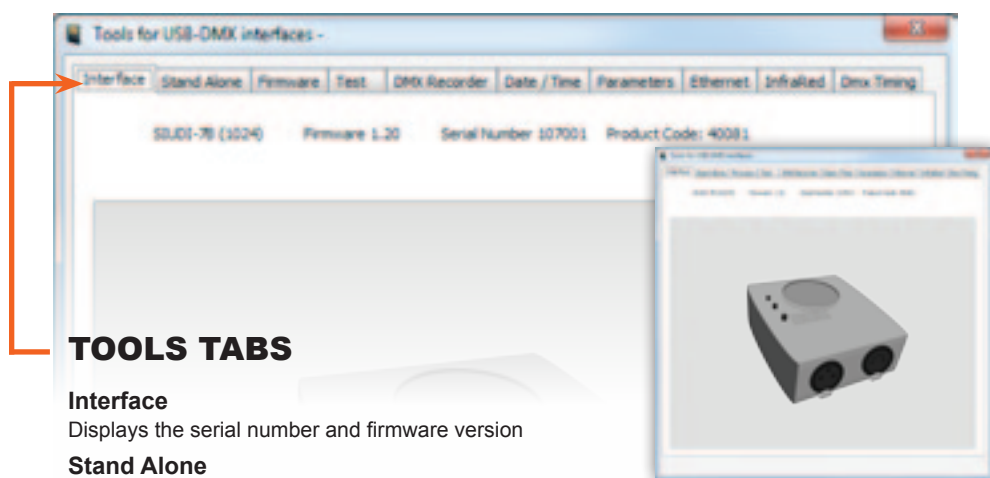

TOOLS TABS

Interface

Displays the serial number and firmware version

Stand Alone

Set the interface to stand alone mode

Firmware

Write the latest firmware

Test

Test DMX outputs and ports

DMX Recorder

Record DMX sequences via DMX input

Date / Time

Set date, time, and location coordinates

Parameters

Adjust special parameters

Ethernet

Set Ethernet settings such as IP address

InfraRed

Reset default infrared settings

Dmx Timing

Adjust DMX output signal

Nicolaudie software

- Easy Stand Alone software (PC)
- ESA2 software (PC & Mac)
- ESA Pro software* (PC)
- Sunlite Suite 2* (PC, works only with SUITE2-FC or FC+ interfaces)

* multi-zone compatible software packages